

[PBX PLUG 1xx] Commandes

Voir les log des ports BRI / PRI

```
vxTarget# debug isdn all layer 2-3 full
vxTarget# monitor loggin
```

Etat du trunk sip

```
vxTarget# show voice sip-gateway
```

```
pbxplug#show voice sip-gateway
  Sip-Gateway statistics :
  Gateway state                up
  Operstatus                   up
  SIP-GW entity opened sockets:
    UDP sockets:
      Sockidx: 0, 172.16.1.1:5060
  Registration state           registered
  RTP monitoring               disable
  Nb Registered endpoints/Max to register/Registrar server:
    [1/1]                      orange-*****.fr
  Bandwidth really used/CAC value/unused 95200 / 95200/ 2147483647 bps
  Threshold of bandwidth to switch  unused
  Max Bandwidth exceeded       0
  Number of lower switching    0
  Registration errors          0

  Current sip-protocol-mode    ipv4 (config : ipv4)
  Current call                 1
  Calls released by rtp monitoring 0

  Authentication Rejects      0

  Dropped packets             0
  Sip-Gateway statistics :
  Gateway state                up
```

Operstatus	up
SIP-GW entity opened sockets:	
UDP sockets:	
Sockidx: 0, 172.16.1.1:5060	
Registration state	registered

Revision #2

Created 28 February 2025 08:03:19 by Dunnload

Updated 22 April 2025 08:54:48 by Dunnload