

[PBX PLUG 1xx] Commandes

Voir les log des ports BRI / PRI

```
vxTarget# debug isdn all layer 2-3 full
vxTarget# monitor loggin
```

Etat du trunk sip

```
vxTarget# show voice sip-gateway
```

```
pbxplug#show voice sip-gateway
Sip-Gateway statistics :
Gateway state           up
Operstatus              up
SIP-GW entity opened sockets:
  UDP sockets:
    Sockidx: 0, 172.16.1.1:5060
Registration state      registered
RTP monitoring          disable
Nb Registered endpoints/Max to register/Registrar server:
  [1/1]                 orange-*****.fr
Bandwidth really used/CAC value/unused 95200 / 95200/ 2147483647 bps
Threshold of bandwidth to switch      unused
Max Bandwidth exceeded                 0
Number of lower switching              0
Registration errors                    0

Current sip-protocol-mode      ipv4 (config : ipv4)
Current call                    1
Calls released by rtp monitoring  0

Authentication Rejects         0

Dropped packets                0
Sip-Gateway statistics :
```

Gateway state	up
Operstatus	up
SIP-GW entity opened sockets:	
UDP sockets:	
Sockidx: 0, 172.16.1.1:5060	
Registration state	registered

Revision #2

Created 28 February 2025 08:03:19 by Dunnload

Updated 22 April 2025 08:54:48 by Dunnload