

# Supprimer la configuration

Pour supprimer la configuration, il faut utiliser ces deux commandes :

```
console>enable  
console#delete startup-config  
console#reload
```

---

Revision #1

Created 12 March 2024 11:54:38 by Dunnload

Updated 12 March 2024 11:54:45 by Dunnload