

# Configuration du 802.1X

## Configuration du RADIUS

```
ProCurve Switch 2650(config)# radius-server host 192.168.1.50  
ProCurve Switch 2650(config)# aaa authentication port-access eap-radius
```

## Activation sur des ports

```
ProCurve Switch 2650(config)# aaa port-access authenticator 15  
LACP has been disabled on 802.1x port(s).
```

## Bascule de VLAN en cas d'échec d'authentification

```
ProCurve Switch 2650(config)# aaa port-access authenticator 15 unauth-vid 200  
ProCurve Switch 2650(config)# aaa port-access authenticator 15 client-limit 5
```

## Activation

```
ProCurve Switch 2650(config)# aaa port-access authenticator active
```

## Vérification

```
ProCurve Switch 2650(config)# show port-access authenticator
```

Port Access Authenticator Status

Port-access authenticator activated [No] : Yes  
Allow RADIUS-assigned dynamic (GVRP) VLANs [No] : No

	Current	Current	Cntrl	
Port	Status	VLAN ID	Port COS	Dir
-----	-----	-----	-----	-----
15	Closed	1	No-override	both

