

# Configuration VLAN voix, LLDP et QOS

## Configuration d'un VLAN voix

```
Procurve switch 2650(config)# vlan 100
Procurve switch 2650(vlan-100)# voice
```

```
ProCurve Switch 2650# sh vlan
```

Status and Counters - VLAN Information

Maximum VLANs to support : 8

Primary VLAN : DEFAULT\_VLAN

Management VLAN :

802.1Q	VLAN ID	Name	Status	Voice
-----	-----	-----	-----	-----
1	DEFAULT_VLAN		Port-based	No
100	voice		Port-based	Yes
101	data		Port-based	No

## Activation du LLDP

```
Procurve switch 2650(config)# lldp run
```

```
ProCurve Switch 2650(config)# no lldp run
```

## Configuration de la QOS

```
ProCurve Switch 2650(config)# qos type-of-service diff-services
```

---

Revision #1

Created 11 March 2024 17:27:12 by Dunnload

Updated 11 March 2024 17:27:24 by Dunnload