

Configuration VLAN voix, LLDP et QOS

Configuration d'un VLAN voix

```
Procurve switch 2650(config)# vlan 100
Procurve switch 2650(vlan-100)# voice
```

```
ProCurve Switch 2650# sh vlan
```

Status and Counters - VLAN Information

Maximum VLANs to support : 8

Primary VLAN : DEFAULT_VLAN

Management VLAN :

802.1Q	VLAN ID	Name	Status	Voice
1	DEFAULT_VLAN	Port-based	No	
100	voice	Port-based	Yes	
101	data	Port-based	No	

Activation du LLDP

```
Procurve switch 2650(config)# lldp run
```

```
ProCurve Switch 2650(config)# no lldp run
```

Configuration de la QOS

```
ProCurve Switch 2650(config)# qos type-of-service diff-services
```

Revision #1

Created 11 March 2024 17:27:12 by Dunnload

Updated 11 March 2024 17:27:24 by Dunnload