

# Importer et Exporter la configuration via TFTP

## Exporter la configuration vers un serveur TFTP

```
ProCurve Switch 2650# copy startup-config tftp 192.168.1.200 config.txt
```

## Importer la configuration depuis un serveur TFTP

```
ProCurve Switch 2650# copy tftp startup-config 192.168.1.200 config.txt  
Device may be rebooted, do you want to continue [y/n]? y
```

---

Revision #1

Created 11 March 2024 17:31:36 by Dunnload

Updated 11 March 2024 17:31:47 by Dunnload