


Installation de Windows XP

Prérequis : Procéder une image d'installation de Windows XP

Etape 1 : Télécharger WinSetupFromUSB-1-10

Etape 2 : Configuration :

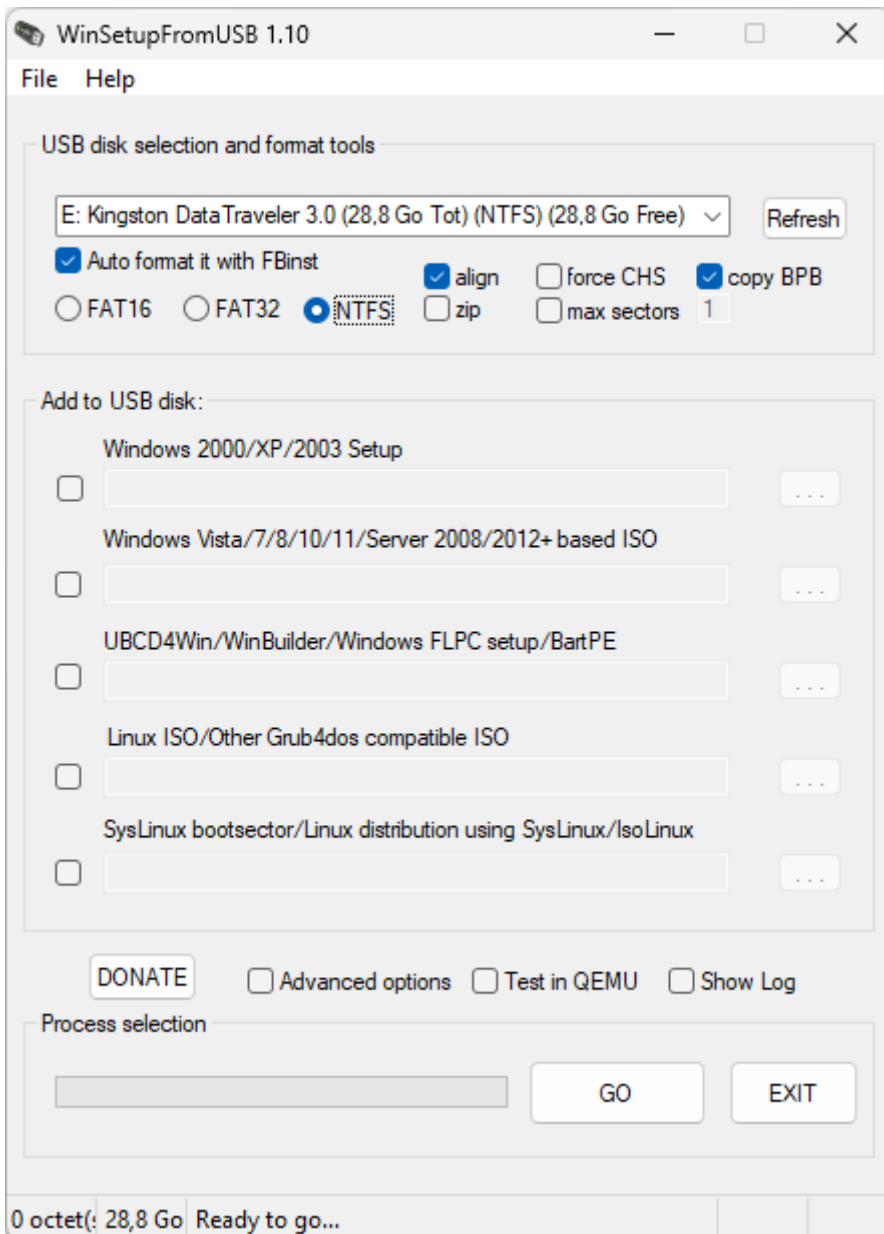

Etape 3 : Extraire les fichiers de l'iso

Etape 4 : Cocher la cache : Windows 2000/XP/2003 Setup

Etape 5 : Sélectionner le dossier d'installation de Windows XP après l'extraction

Etape 6 : GO !

Etape 7 : Booter sur la clef USB

Etape 8 : Sélectionner : 3 First part of XP setup from partition 0

GRUB4DOS 0.4.5c 2013-07-24, Mem: 634K/2984M/29696M, End: 3566D7

5

0 ...Back to Main Menu

1 Auto-detect and use F6 SATA/RAID/SCSI Driver

2 Auto-detect and use F6 SATA/RAID/SCSI Driver + Firadisk

▶ 3 First part of Windows XP Professional SP3 setup from partition 0

4 Second part of Windows XP Professional SP3 setup/Boot first internal disk

Use the ↑ and ↓ keys to highlight an entry. Press ENTER or 'b' to boot.
Press 'e' to edit the commands before booting, or 'c' for a command-line.

Suivre les étapes d'installation de Windows XP. Une fois terminé, le pc redémarre.

Etape 8 : Au redémarrage, sélectionner : 4 Second part of Windows XP setup/boot

- 0 ...Back to Main Menu
- 1 Auto-detect and use F6 SATA/RAID/SCSI Driver
- 2 Auto-detect and use F6 SATA/RAID/SCSI Driver + Firadisk
- 3 First part of Windows XP Professional SP3 setup from partition 0
- ▶ 4 Second part of Windows XP Professional SP3 setup/Boot first internal disk

Use the ↑ and ↓ keys to highlight an entry. Press ENTER or 'b' to boot.
Press 'e' to edit the commands before booting, or 'c' for a command-line.

Etape 9 : FINI !

Revision #2

Created 25 April 2026 11:48:23 by Dunnload

Updated 25 April 2026 11:57:06 by Dunnload